



# LEDLENSER HF6R


## HF6R Core

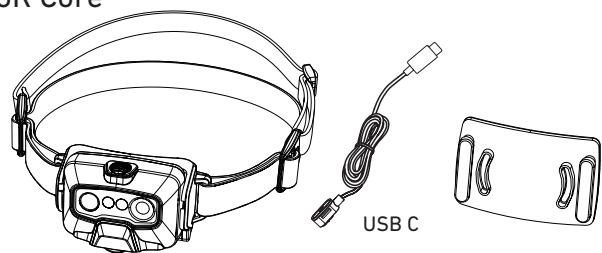


## HF6R Work

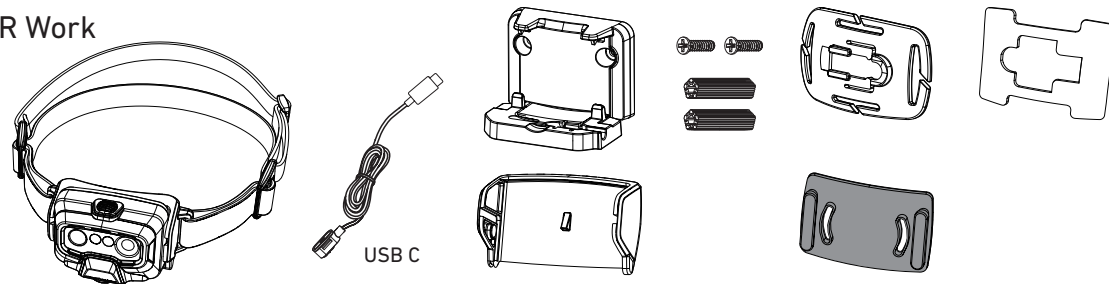


## HF6R Signature

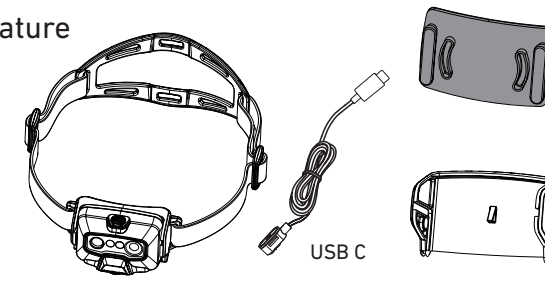


## Magnetic Charge System

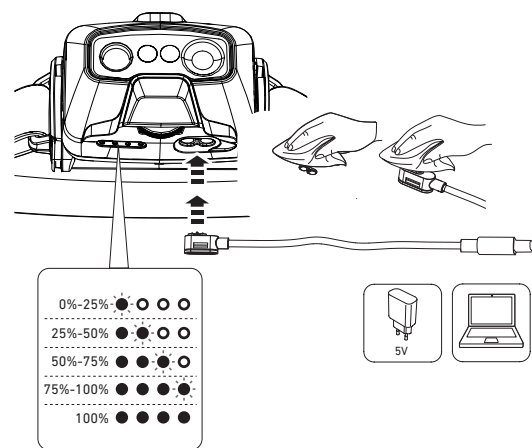


## Battery Indicator

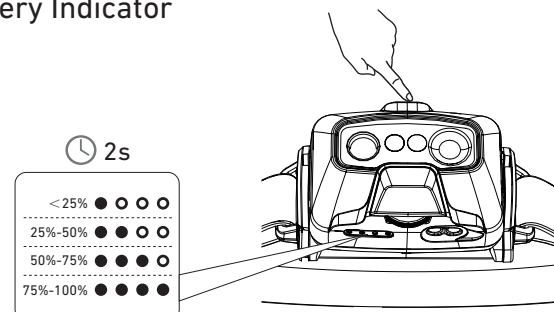


## Transportation Lock

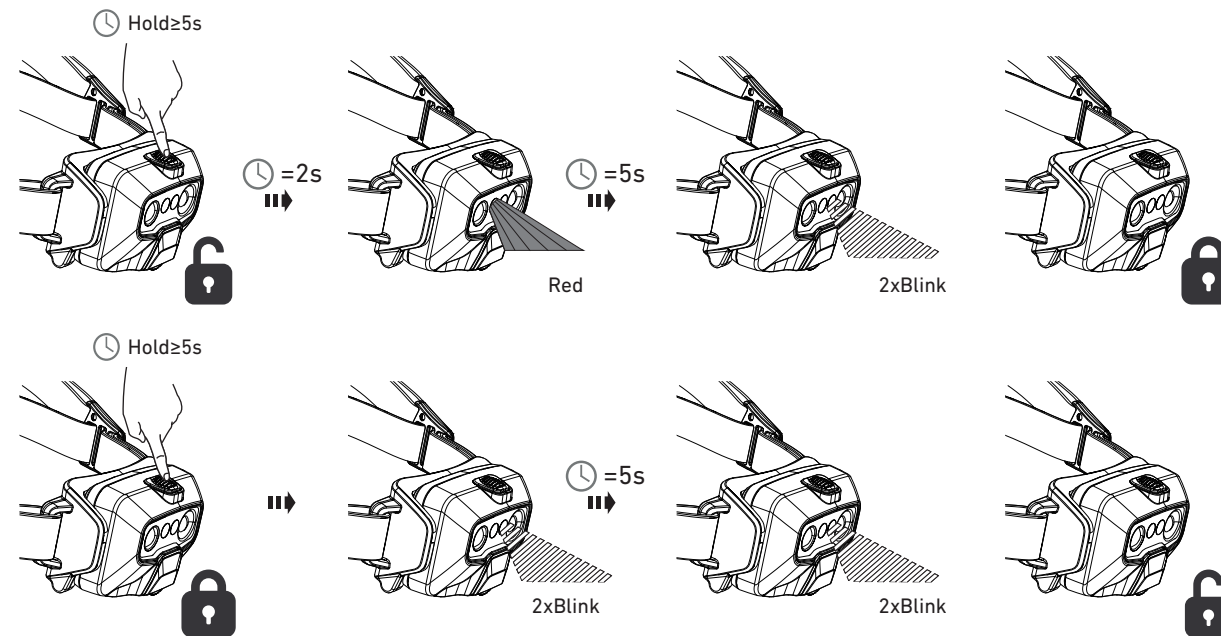


## Low Battery Warning

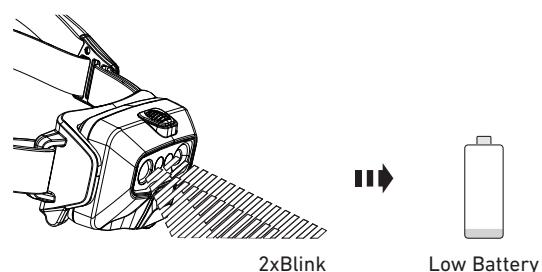


## Boost

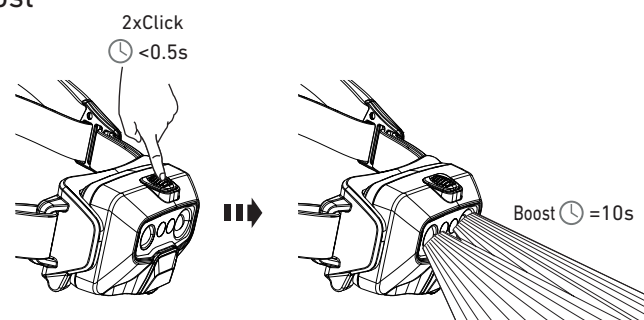


## Boost Overheat Warning

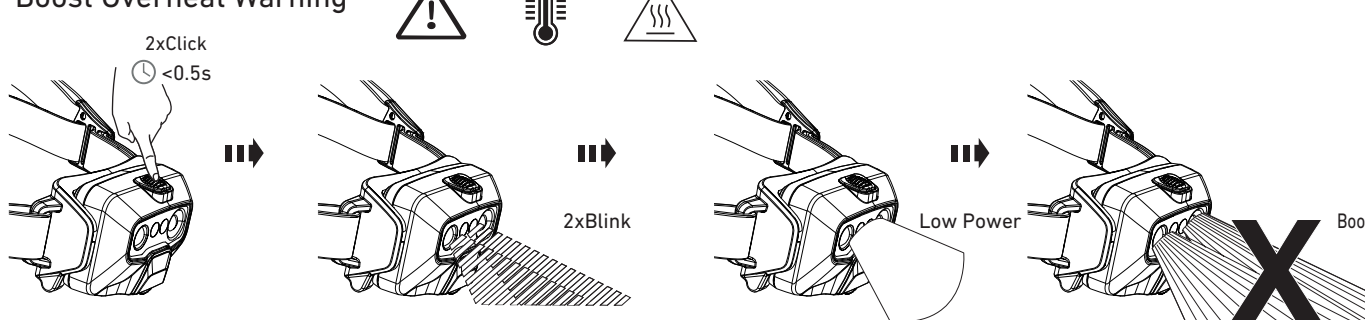


## Lamp Head Rotation

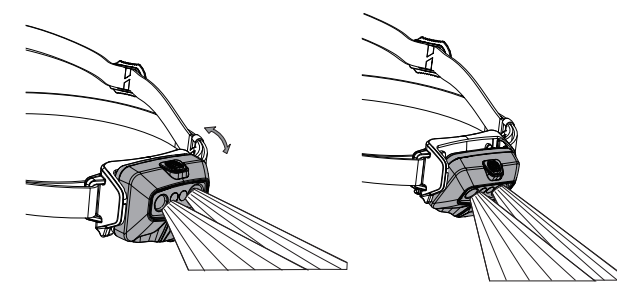


## Connecting System Adapter (HF6R Work/HF6R Signature)

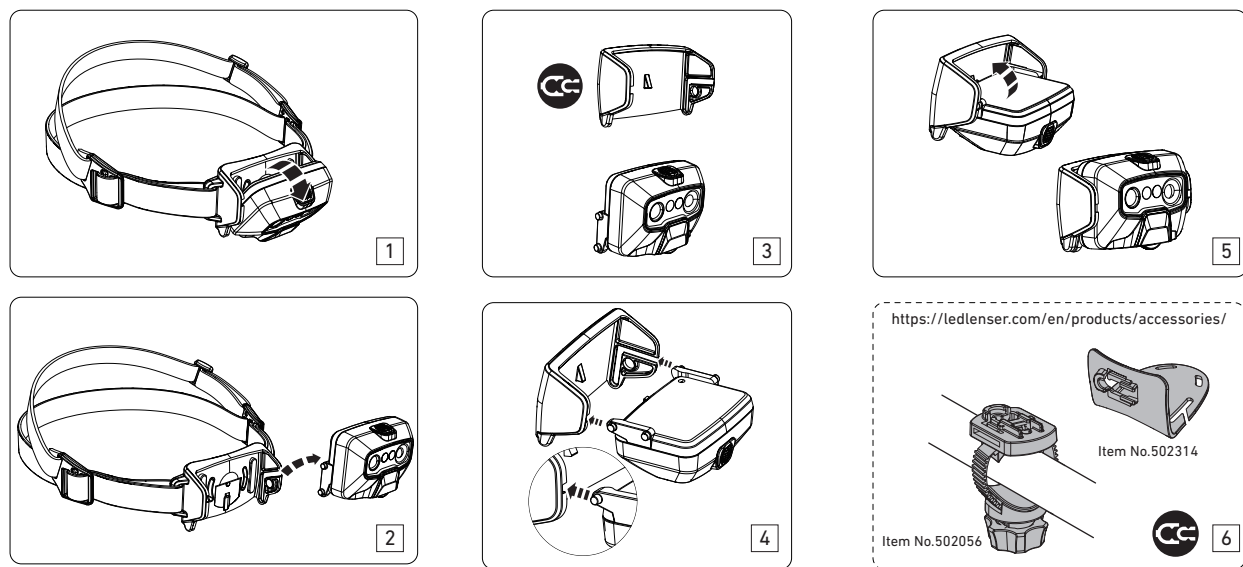



## Comfort Pad

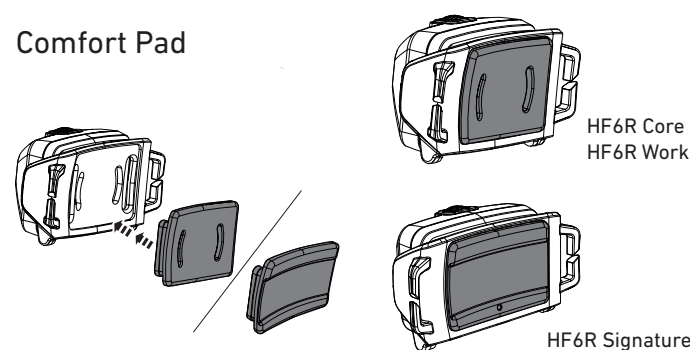

## Digital Advanced Focus System

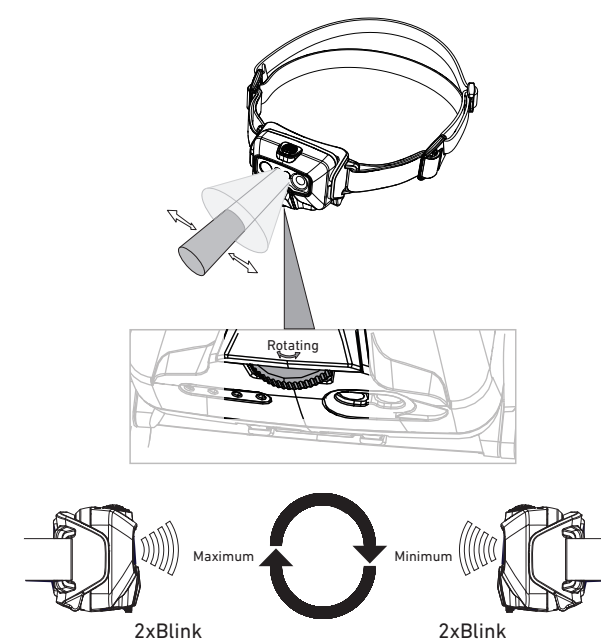

## Helmet Adapter (HF6R Work)

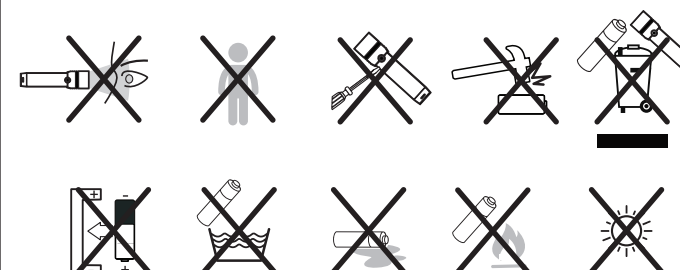
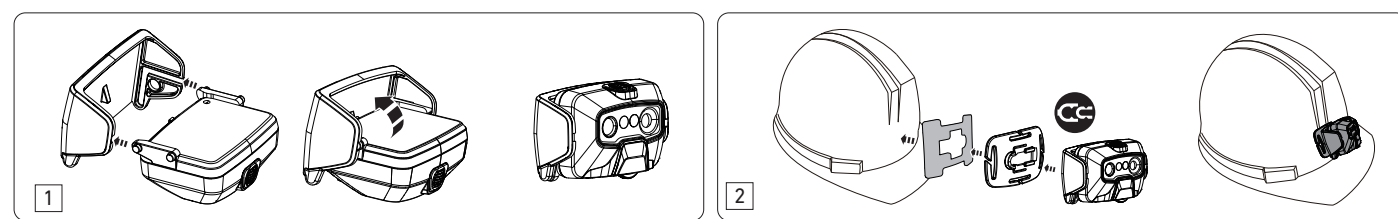


**Ledlenser GmbH & Co. KG**  
 Kronenstrasse 5-7 • 42699 Solingen • Germany  
 Phone +49 212/5948-0 Fax +49 212/5948-200  
 info@ledlenser.com




HF6R Core/HF6R Work


HF6R Signature

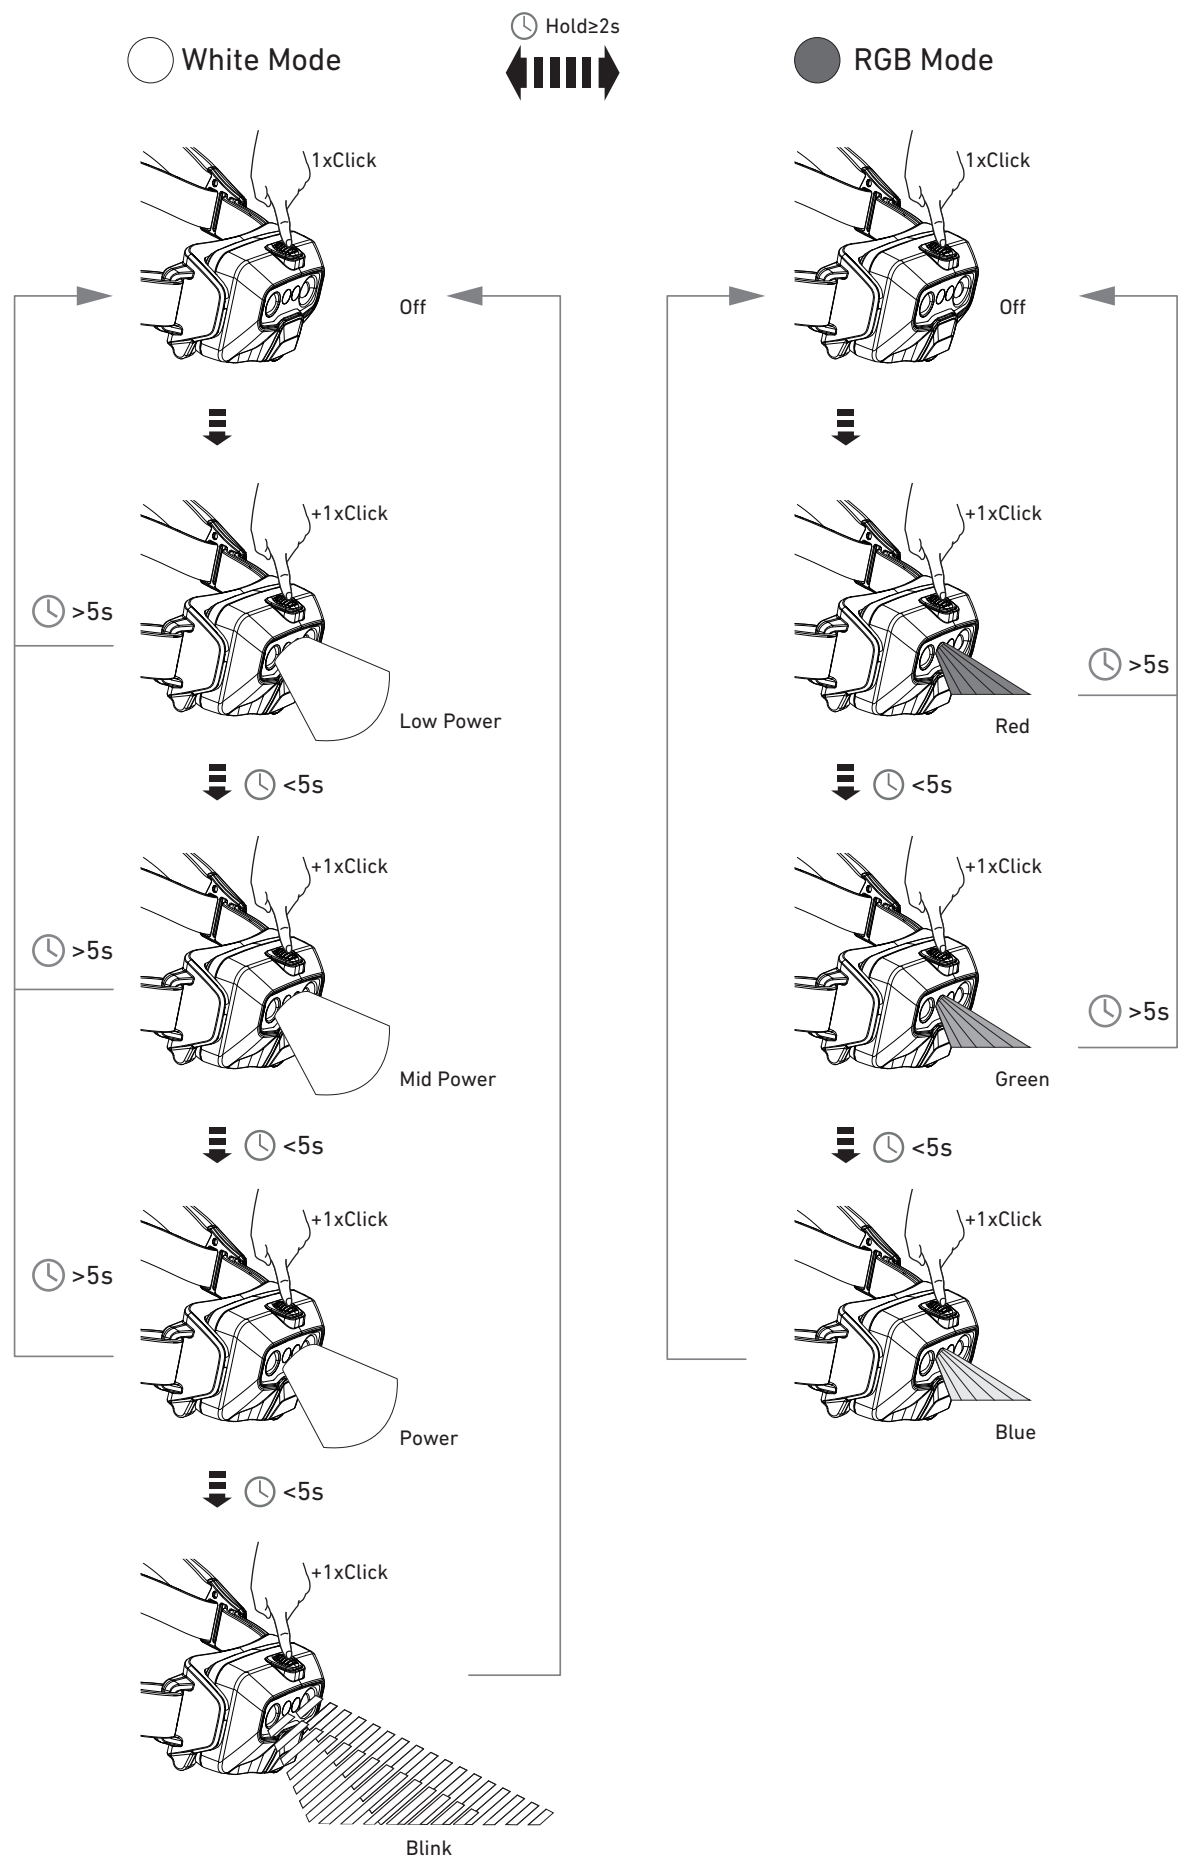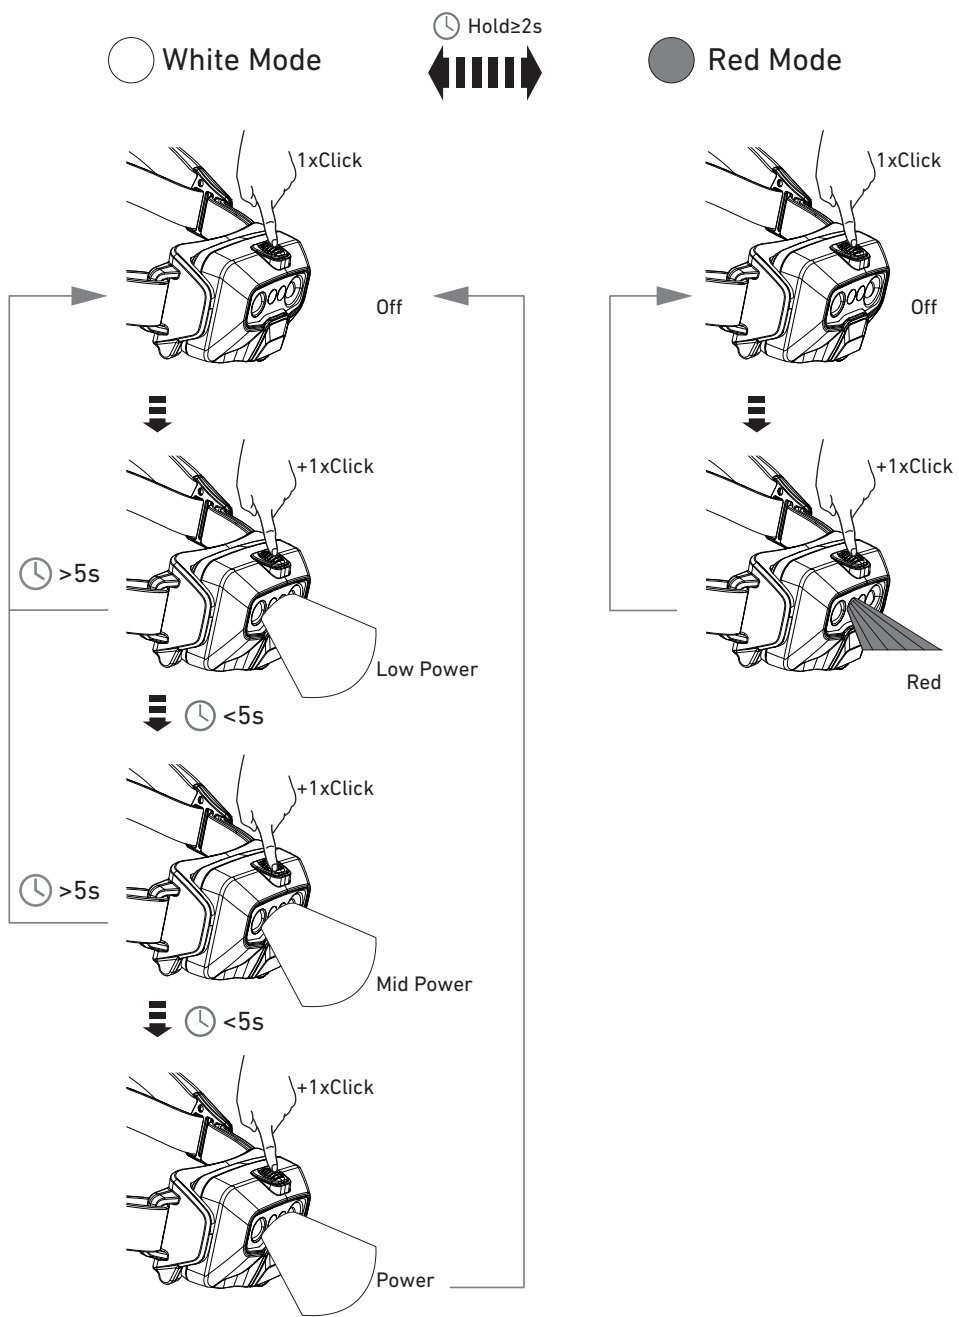

Direct to Red Mode (HF6R Core/HF6R Work)

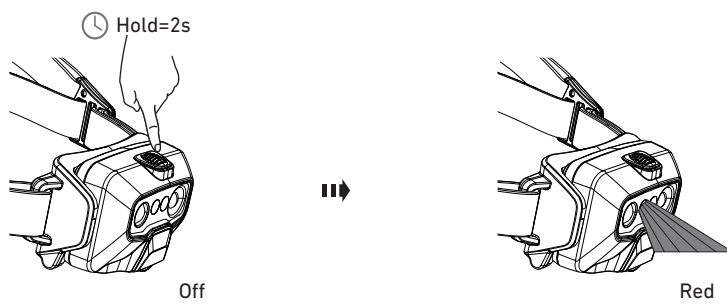

Direct to RGB Mode (HF6R Signature)

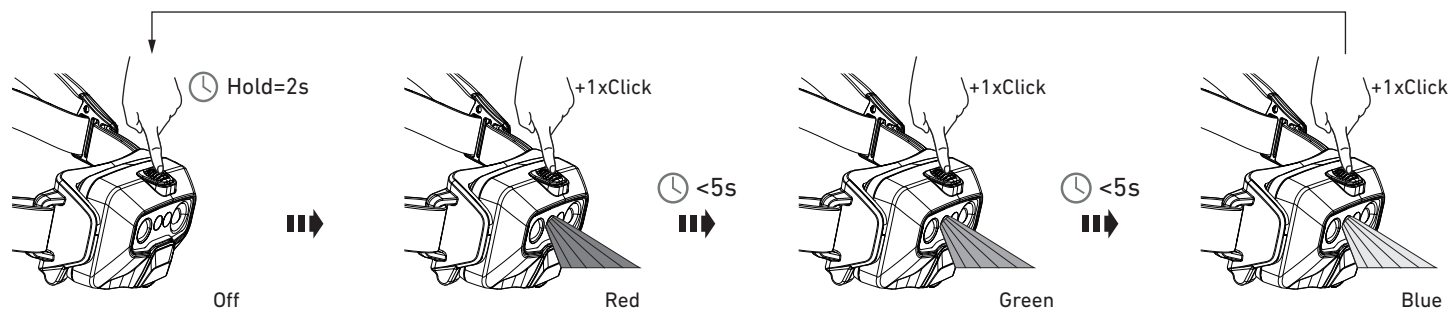

HF6R Core/HF6R Work

