

DENON®

D-T1

CD RECEIVER SYSTEM

Quick Start Guide

Guide de démarrage rapide / Guía de inicio rápido

Read Me First....

Lisez-moi en premier.... / Lea esto primero....

ENGLISH

FRANÇAIS

ESPAÑOL

Welcome

Thank you for choosing a Denon CD receiver system. This guide provides step-by-step instructions for setting up your CD receiver system.

Please do not return this unit to the store – call for assistance.

If you need help... :

If you need additional help in solving problems, contact Denon customer service in your area.

For details, see the Denon homepage.

www.denon.com

Before You Begin

What's In the Box


Quick Start Guide		FM indoor antenna	
Safety Instructions		AM loop antenna	
Notes on radio		Remote control unit (RC-1229)	
Warranty (for North America model only)		LR03/AAA batteries	
CD receiver		Speaker systems	
Power cord		Speaker cables	



- These drawings are for illustrative purposes only and may not represent the actual product(s).

1 Connection


- 1** Connect the left and right speakers to the D-T1.

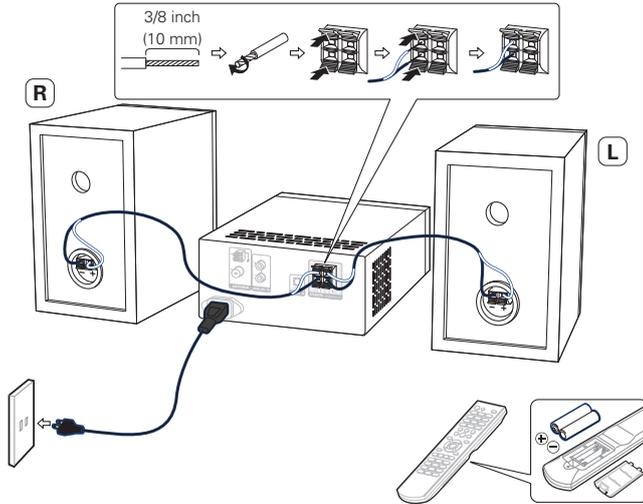

- 2** Connect the power cord from the D-T1 to a power outlet.

- 3** Insert the batteries into the remote.



Connecting a FM/AM antenna

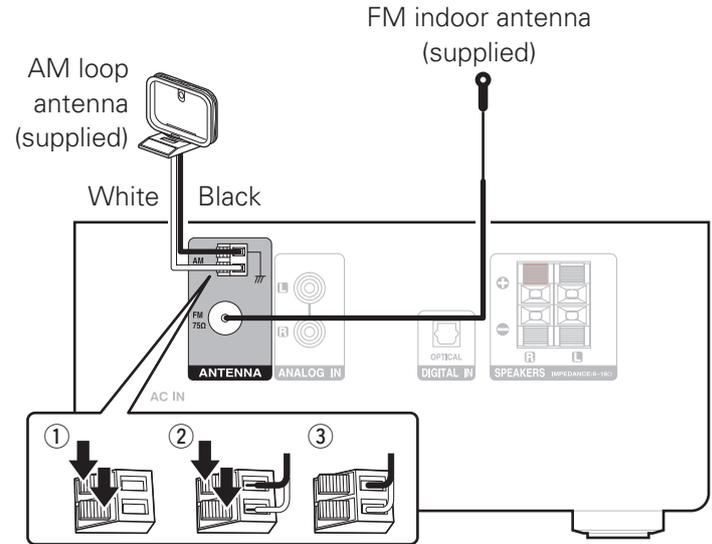

- See "AM loop antenna assembly" on the next page for instructions on how to assemble the AM loop antenna.

❑ AM loop antenna assembly

- 1** Put the stand section through the bottom of the loop antenna from the rear and bend it forward.
- 2** Insert the projecting part into the square hole in the stand.

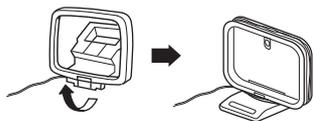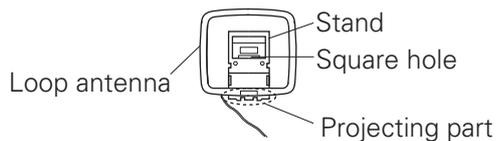

2 Enjoying your music!

❑ Play a CD

- 1** Press **CD** to switch the input source to “CD”.
- 2** Insert a disc.
- 3** Press **▶/||**.
Playback starts.

❑ Listening to FM/AM broadcasts

- 1 Use **FM** or **AM** to select the reception band.
- 2 Use **TUNE +** or **TUNE -** to select the station you want listen to.



- Pressing **MODE** while an FM signal is being transmitted changes the FM reception mode between **STEREO** and **MONO** reception modes. Set to mono reception mode if the signal is too weak for stable stereo reception. Factory default is “**STEREO**”.

❑ Listening to preset FM/AM stations

This unit can be preset with a total of 40 broadcast stations. (FM: 30 stations, AM: 10 stations)

- 1 **Tune in the station you want to preset.**
- 2 **Press ENTER.**
The preset number flashes.
- 3 **Use 0 – 9, +10 or PRESET +, – to select the number to be preset, then press ENTER.**
The reception frequency and reception mode are preset.

❑ Enjoying music using Bluetooth

1


Press Bluetooth to switch the input source to “BT AUDIO”.

When using for the first time, the unit will go into the pairing mode automatically and “PAIRING” will appear on the display of the unit.



2


Activate the Bluetooth settings on your mobile device.

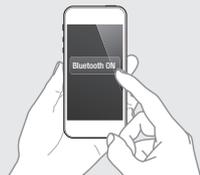

3

Select “Denon D-T1” from the Bluetooth device list on your mobile device.

- Enter “0000” when the password is requested on the screen of the Bluetooth device.

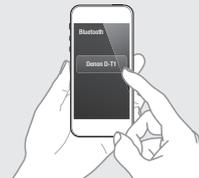

4

Play music using any app on your device.



To reconnect a previously paired Bluetooth device, Start at step 2.

Owner's Manual

- For more information, visit www.denon.com
- Refer to the Online Manual for other functions information and operation procedure details.
manuals.denon.com/DT1/NA/EN/



Online Manual



DENON®

www.denon.com

Printed in China 5411 11702 00AD
Copyright © 2018 D&M Holdings Inc. All Rights Reserved.