

Introduction
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important
Read this important information carefully before you use the appliance and save it for future reference.

This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Danger

- Never immerse the appliance in water.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

- Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance functions abnormally in any way, or if the appliance has been dropped or leaks.

- Do not immerse the iron (for cordless iron) base in water.

- If the mains cord is damaged, you must have it replaced by Philips, or a duly certified, authorised by Philips or similarly qualified persons in order to avoid risks.

- Never leave the appliance unattended when it is connected to the mains.

- Always unplug the appliance from the socket outlet before you fill the water reservoir. For cordless, the iron must be removed from the base before you fill the water reservoir.

- Consider the iron's weight when you move it with the base provided.

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Do not let children play with the appliance.

- Older children aged 8 or over are only allowed to clean the appliance and perform the Calc-Clean procedure under supervision.

- Keep the iron and its mains cord out of the reach of children less than 8 years of age when the appliance is switched on or cooling down.

- Always place the base (for cordless iron) and use the iron on a stable, level and horizontal surface.

- This iron is not suitable for use on a flat, soft, heat-resistant surface. When you place the iron on its heel or its stand, make sure that the surface on which you place it is stable.

- Do not let the mains cord come into contact with the hot soleplate of the iron.

- (For cordless iron) Do not do ironing with the base attached to the iron. Otherwise, the supply cord will easily get damaged. The steam iron is designed for cordless iron only.

CAUTION: Hot surface (Fig. 1)

- Surfaces are liable to get hot during use (for irons with 'hot' symbol marked on the appliance).

Caution

- Only connect the appliance to an earthed wall socket.

- Check the mains cord regularly for possible damage.

- Turn off the iron and the mains cord before you plug it in the wall socket.

- These surfaces of the iron can become extremely hot and may cause burns if touched.

- Descaling the iron regularly according to the instructions in chapter 'Cleaning and maintenance' in the user manual.

- You have found ironing when you clean the appliance, when you iron or when you use the steam function. Turn off the iron for a short time, set the steam control to the 'dry ironing' position, put the iron on its heel and remove the mains plug from the wall socket.

- Type of water to use: The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent scale build-up and prolong the life of the appliance.

- Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- This symbol (Fig. 2) means that this product shall not be disposed of with normal household waste.

- Follow your country's rules for the separate collection of electrical and electronic products.

Guarantees and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

БЪЛГАРСКИ

Въведение
Поздравявам за българска нюанска и горе гореща вода Philips! За да се фокусираме и усъмним по време на разглеждане на Philips нюанска.

Бърз инсталатор
Продължавате ли да използвате уреда, прокременено тъкмо във Външна информация и в раздела за споделка във външна.

Този уред е проектиран само за употреба в домашни условия. При промиване употребете неподготвена употреба или несъпакане на инструкции по разглеждане на гореща вода.

Приложете гореща вода към гореща вода.</p