


We are so happy you chose a
hama product.

Enjoy using it!



hama

Quick Installation Guide

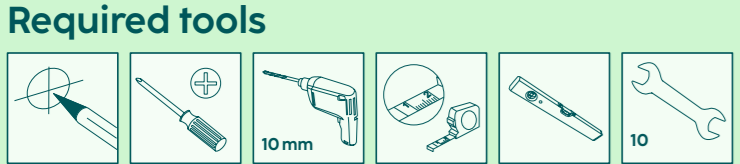

Installation kit

A1		8x60 (x3)	C2		M6x20 (x4)
A2		Ø10x60 (x3)	D1		M8x12 (x4)
A3		M8 (x3)	D2		M8x20 (x4)
B1		M8 (x4)	D3		M8x30 (x4)
B2		Ø8x10 (x4)	D4		M8x50 (x4)
B3		Ø8x20 (x4)	E		(x1)
C1		M6x12 (x4)	F		(x1)

1a Drilling the holes

1b Wall mounting the bracket

2 Mounting on backside of the TV

Flat TV backside
 C1, D1, D4 + B1

Curved TV backside
 C1, D1, D4 + B1 + B2

D3, D4 + B3

M8x50 + Ø8x5 = M8x45 (D4)

★ You do not need a washer for the D-screws

3 Adjustment & Fixing

4 Adjustment & Fixing

Do you need more help?



Scan QR or visit: www.hama.com
 00220845 Downloads